


US2-B32 / US2-BA32 快速安裝導引


產品示意圖與配件表

前視圖

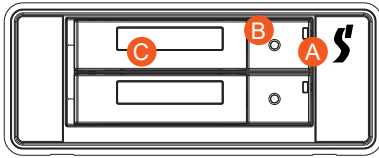

- A** 硬碟讀取燈
- B** 硬碟抽取盒頂針孔
- C** 硬碟抽取盒頂把手

後視圖

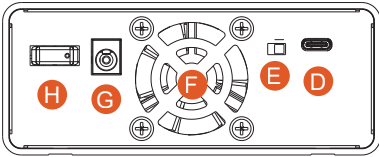

- D** USB 3.2 Gen2 Type-C 埠 (10Gbps)
- E** 風扇轉速切換按鈕
- F** 風扇
- G** 電源插座
- H** 電源開關




V0.1 (Nov. 2022)

1

硬體安裝

請參照下列步驟，完成 US2-BA32/US2-B32 的硬體安裝：

1. 將系統擺放於穩固平台，並確認散熱風扇口沒有被其他物體擋住，系統四周有適當的散熱空間。(擺放環境請避免接近潮濕或其他易對產品造成損傷的環境)
2. 使用配件內附的頂針插入硬碟抽取盒頂針孔後，抽取盒門將會輕彈開啟，便可取出抽取盒。
3. 安裝 U.2 NVMe SSD 安裝至抽取盒上。

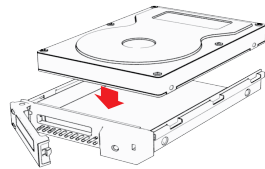

4. U.2 NVMe SSD 安裝完成後，請將抽取盒平移放入主機內，並關上把手。
5. 連接電腦與 US2-BA32/US2-B32 的 USB 埠。
6. 將電源線與電源轉接器連接好，並將兩端接頭各自接到 US2-BA32/US2-B32 及電源插座後，啟動 US2-BA32/US2-B32。
7. 此時，您的作業系統將會自動辨識到儲存容量；待辨識成功後，請依據您所需的儲存格式，將系統依照作業系統的指示完成格式化。待硬盤格式化完成後，便可直接使用。

* 若您使用的是 USB 3.2 C to A 連接線，主機端的 Type-A 需為 USB 3.2 Gen2 規格方可達到最佳存取效能。

3

打開包裝外盒後，包裝內容應包含下列組件：

產品配件表



主體 x1



USB 3.2 C to C 連接線 x1
(for US2-BA32/US2-B32)



USB 3.2 C to A 連接線 x1
(for US2-BA32)



電源線 x1



電源轉接器 x1



螺絲及鑰匙



快速安裝導引 x1

- 請先確認相關配件與產品本身是否有受損或是缺少配件，若有任何疑問，請與您的經銷商或業務人員聯絡。
- 請前往官網 (www.stardom.com.tw) 下載說明書、驅動程式以及其餘相關資源。

燈號說明

狀態	硬碟狀態燈
資料存取	紫燈閃爍
U.2 閒置	紫燈恆亮
無 U.2	紅燈恆亮

2

產品使用注意事項

1. 硬碟格式化後的可使用儲存容量會小於硬碟標示的容量。
2. 當系統運作時，請勿任意移除，以免導致資料遺失。
3. 為了確保節能功能的正常運作，請將 USB 連接線常態性與電腦端保持連接。
4. 當您需要關閉或移除 US2-BA32/US2-B32 時，務必透過您所操作的作業系統中執行硬碟安全移除後，方進行移除 USB 3.2 連接線或電源線的動作。
5. 若您使用的是 USB 3.2 C to A 連接線，主機端的 Type-A 需為 USB 3.2 Gen2 規格方可達到最佳存取效能。
6. 強烈建議除了使用 US2-BA32/US2-B32 的資料儲存功能外，請針對重要資料備份到另一個儲存裝置上或遠端備份，雙重備份您重要的資料。若您儲存在 US2-BA32/US2-B32 的資料損毀或遺失，STARDOM 將不負任何的責任。

感謝您使用 銳銜科技股份有限公司 的產品。

本手冊裡的資訊在出版前雖然已經被詳細確認，但實際產品規格將已出貨時為準；任何的產品規格或相關資訊更新，請您直接上 www.STARDOM.com.tw 網站查詢，或直接與您的業務聯絡窗口聯繫，本公司將不另行通知。

如果您對 銳銜科技 的產品有任何疑問，或是想獲得最新產品訊息、使用手冊或韌體，請您聯絡 services@stardom.com.tw，我們將儘速回覆您。


STARDOM 為 銳銜科技股份有限公司 旗下品牌之一
本說明相關產品內容歸 銳銜科技股份有限公司 版權所有

4

US2-B32 / US2-BA32 Quick Setup Guide


Product Illustration and Parts List

Front View

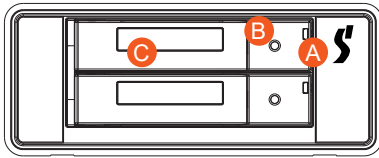

- A** HDD access light
- B** HDD enclosure pin release
- C** HDD enclosure handle

Rear View

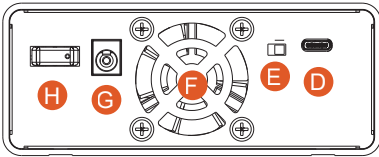

- D** USB 3.2 Gen2 Type-C port (10Gbps)
- E** Fan speed switch
- F** Fan
- G** Power socket
- H** Power switch



The following items should be inside the package upon opening:

Product Parts List



Product x1



USB 3.2 C to C Cable x1
(for US2-BA32/US2-B32)



USB 3.2 C to A Cable x1
(for US2-BA32)



Power cable x1



AC/DC Adapter x1



Screws and key



Quick setup guide x1

- Please check the product and accessories for any defect or missing parts. If you have any questions, please contact your product supplier.
- Please visit the official website - Download page (<http://www.stardom.com.tw/STARDOM2016/download.php>) to download other related resources.


The Indication of HDD Status

Status	HDD Status Light
No U.2	Red light always on
Data access	Purple light flashing
U.2 idle	Purple light always on

Hardware Installation

Please follow the instructions below to complete the hardware installation.

1. Place the system on a stable surface. Ensure that the vent is not blocked and that it is installed in a well-ventilated area. (Please keep the product away from moisture and other environment that might be harmful to the product)
2. Use the ejector pin included in the accessory kit to eject the HDD enclosure handle, and then pull tray handle to remove it.
3. Mount the 2.5" HDD onto the removable tray.
4. When the HDD installation has been completed, insert the tray into the system horizontally and secure the latch into place.
5. Use the RAID switch on the back of US2-BA32/US2-B32 to set the RAID mode to be used.
6. Depending on the computer's USB port type, select the corresponding USB cable in the accessory to connect the computer to the US2-BA32/US2-B32 USB port.
7. Connect the power cord to the power adapter, connect the connectors at both ends to the US2-BA32/US2-B32 and the power socket, and then start the US2-BA32/US2-B32
8. After the computer is turned on, the storage capacity will be automatically recognized by the operating system. After the storage capacity is recognized successfully, please format the system according to your desired storage format and follow the instructions of the operating

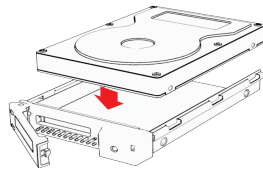

※ If you are using a USB 3.2 C to A cable, the Type-A on the host side needs to be USB 3.2 Gen2 for best access performance.

Important Notice

1. The usable storage capacity of the hard disk after formatting will be less than the capacity indicated on the hard disk.
2. To prevent data loss, do not remove US2-BA32/US2-B32 while the system is running.
3. Please always connect the USB cable to the computer to ensure the energy saving function operating normally.
4. If the US2-BA32/US2-B32 needs to be shut down or disconnected, please ensure the HDD is safely removed through your operating system before turning off the power.
5. If you are using a USB 3.2 C to A cable, the Type-A on the host side must be USB 3.2 Gen2 for best access performance.
6. We strongly recommend backing up important data stored on the US2-BA32/US2-B32 to another storage device or a remote site. STARDOM will not be held liable for the damage or loss of data you stored on the US2-BA32/US2-B32.

Thank you for choosing STARDOM's product. The information provided in this manual was checked before publication, but the actual product specifications may have changed before shipping. Latest product specifications and updates can be found at www.STARDOM.com.tw or through your sales representative. No separate notifications will be provided by our company. If you have any questions about RAIDON products or would like to receive the latest product information, instruction manuals, or firmware, please contact services@stardom.com.tw for assistance.

STARDOM is one brand under RAIDON TECHNOLOGY, INC.

All product-related content in this manual are copyrighted by RAIDON TECHNOLOGY, INC.