


SR4-B32 系列快速安裝導引

產品外觀圖與包裝內容物

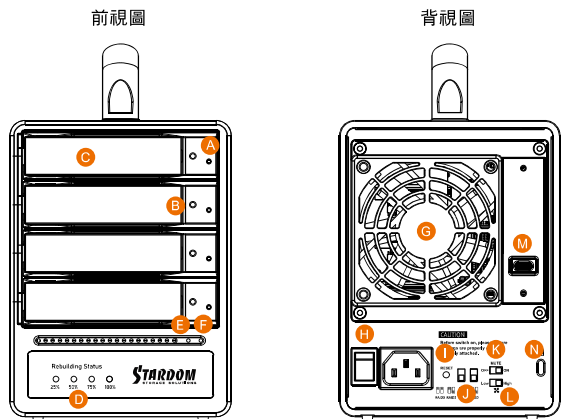

- | | | |
|--------------|------------|------------------|
| A 硬碟LED指示燈 | F 電源LED指示燈 | K 靜音鍵 |
| B 硬碟托盤釋放孔 | G 風扇 | L 風扇轉速控制開關 |
| C 硬碟托盤把手 | H 電源開關 | M USB-C埠(20Gbps) |
| D 重建狀態LED指示燈 | I 重設按鍵 | N 防竊孔 |
| E 警示LED指示燈 | J RAID模式開關 | |

包裝內容物

- SR4-B32 x1
- 快速安裝導引 x1
- 螺絲與頂針
- USB3.2 Type-C to Type-C 線 x1 (B32 / BA32)
- USB3.2 Type-C to Type-A 線 x1 (B32A / BA32)

請注意：


- 請檢查產品和所有隨附附件是否有損傷或缺失零件。如果您遇到任何問題，請聯絡您的產品供應商。
- 如需更多資訊、資源和下載相關資料，請造訪STARDOM 官方網站 www.STARDOM.com.tw。



1

v0.1 (Jan. 2026)

2. 安裝硬碟：將磁碟插入磁碟托架，並用提供的螺絲固定。

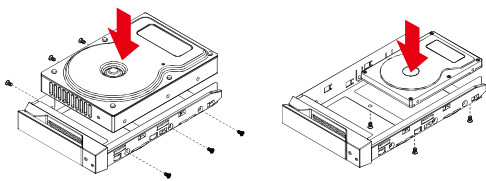


3. 插入磁碟托盤：將磁碟托盤滑回 SR4。
4. 連接電纜：使用隨附的USB線連接 SR4 和 PC/Mac。
5. 開機：開啟系統電源；作業系統應該自動偵測磁碟。
6. 格式化磁碟：如有必要，請依照作業系統提示格式化磁碟。

請注意：

- 請在啟動 SR4 之前將 SR4 連接到 PC/Mac (開機狀態)，否則 SR4 將處於睡眠模式。

RAID模式切換

變更RAID模式：(設值是JBOD)

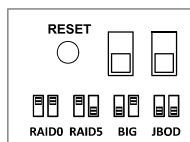

1. 將 SR4 連接到 PC/Mac：依照硬體安裝將 SR4 連接到 PC/Mac 並開啟 PC/Mac。
2. 選擇 RAID 模式：透過變更 RAID 模式開關選擇您想要使用的 RAID 模式。
3. 按下重置按鈕：使用頂針按下重設按鍵。
4. 開機：開啟 SR4 並持續按住重設按鍵 5 秒鐘。一旦 RAID 模式改變，磁碟 LED 將會閃爍。然後您可以釋放重置按鍵。
5. 關閉並重新開啟電源：關閉 SR4 並重新開啟。然後，您就可以在所選的 RAID 模式下使用 SR4。

請注意：

- 如果您想將 RAID 模式從 RAID 5 / RAID 0 / Big 變更為其他模式，請先切換到 JBOD 模式。然後按照步驟進行更改。
- 將 RAID 模式變更為 RAID 5 / RAID 0 / Big 將會清除磁碟上的所有資料。請在更改前將資料備份到其他設備。

3

LED燈號說明


狀態	電源LED	警示LED	硬碟LED		蜂鳴器
			RAID	JBOD	
待機	藍燈恆亮	----	藍燈恆亮	藍燈恆亮	----
資料存取中	藍燈恆亮	----	藍燈恆亮	藍燈恆亮	----
沒有硬碟或硬碟損毀	藍燈恆亮	紅燈恆亮	----	----	鳴叫
資料重建-來源碟	藍燈恆亮	----	藍燈恆亮	----	----
資料重建-目標碟	藍燈恆亮	----	紫燈閃爍	----	----
風扇異常	藍燈恆亮	----	----	----	----
溫度過高	藍燈恆亮	紅燈恆亮	----	----	鳴叫

進度	資料重建狀態LED燈			
	25%	50%	75%	100%
< 25%	藍燈閃爍	----	----	----
< 50%	藍燈恆亮	藍燈閃爍	----	----
< 75%	藍燈恆亮	藍燈恆亮	藍燈閃爍	----
< 100%	藍燈恆亮	藍燈恆亮	藍燈恆亮	藍燈閃爍
100%	藍燈恆亮	藍燈恆亮	藍燈恆亮	藍燈恆亮
完成	----	----	----	----

硬體安裝

請依照以下步驟安裝SR4：

 1. 打開硬碟托盤：使用提供的頂針插入釋放孔，托盤把手將會彈出。拉出托盤。



2

使用前注意事項

1. 備份資料—確保所有重要文件都有備份。
2. 接地—透過接地防止靜電釋放。
3. 拔掉電源—安裝前關閉電腦並拔掉電源插頭。
4. 使用無靜電表面—避免在地毯或導電表面上工作。
5. 閱讀說明—開始之前檢查所有步驟。
6. 安全移除—在關閉 SR4 或移除 USB 連接之前，請務必透過作業系統安全移除 SR4。

感謝您選擇 STARDOM 產品！

請注意，本手冊中的資訊在出版時是正確的，但產品規格在出貨前可能已變更。有關最新規格與更新，請造訪 www.STARDOM.com.tw 或聯絡您的經銷商。

如果您對 STARDOM 產品有任何疑問，或是要取得最新的產品手冊或軟體更新，請發送電子郵件到 supporting@raidontek.com

STARDOM 是 RAIDON Technology, Inc. (銳銳科技) 旗下品牌
本手冊中所有內容的版權均為 RAIDON Technology, Inc. (銳銳科技) 所有



4

SR4-B32 Series Quick Installation Guide

Product Diagrams and Package Contents

Front view

Rear view

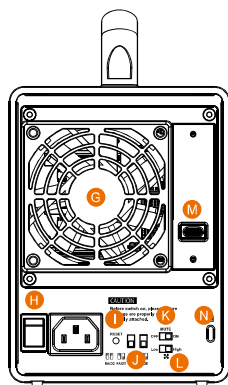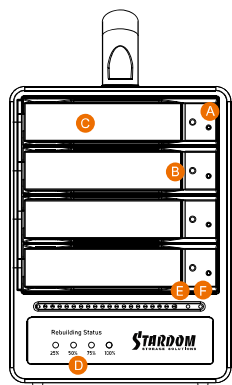


- | | | |
|---------------------------|--------------------|----------------------------|
| A Drive LED | F Power LED | K Mute Button |
| B Drive Tray Release Hole | G Fan | L Fan Speed Adjust Switch |
| C Drive Tray Handle | H Power Switch | M USB-C Port (20Gbps) |
| D Rebuilding Status LEDF | I Reset Button | N Kensington Security Slot |
| E Alarm LED | J RAID Mode Switch | |

Package Contents:

- SR4-B32 unit x1
- USB3.2 Type-C to Type-C Cable x1 (B32 & BA32)
- Quick Installation Guide x1
- USB3.2 Type-C to Type-A Cable x1 (B32A & BA32)
- Screws & Eject pins

Please Note:

 - Check the product and all included accessories for defects or missing parts. If you encounter any issues, contact your product supplier.
- For additional information, resources, and downloads, please visit the STARDOM official website at www.STARDOM.com.tw.



1

v0.1 (Jan. 2026)

LED Status Guide


Status	Power LED	Alarm LED	Drive LED		Buzzer
			RAID	JBOD	
Disk Idle	Blue light always on	----	Blue light always on		----
Accessing	Blue light always on	----	Blue light always on		----
No Disk or Failed	Blue light always on	Red light always on	----		On
Rebuilding - Source	Blue light always on	----	Blue light always on	----	----
Rebuilding - Target	Blue light always on	----	Purple light flashing	----	----
Over Temp.	Blue light always on	----	----		----
Fan Failed	Blue light always on	Red light always on	----		On

Progression	Rebuilding Status LED			
	25%	50%	75%	100%
< 25%	Blue light Flashing	----	----	----
< 50%	Blue light always On	Blue light Flashing	----	----
< 75%	Blue light always On	Blue light always On	Blue light Flashing	----
< 100%	Blue light always On	Blue light always On	Blue light always On	Blue light Flashing
100%	Blue light always On	Blue light always On	Blue light always On	Blue light always On
Finished	----	----	----	----

Hardware Installation


Installing the SR4-B32

 - 1. Open the Disk Tray:** Use the provided key to unlock the Disk Tray, press the disk tray latch and it will be ejected. Then pull out the tray.



2

- 2. Install the Disk:** Insert the disk into disk tray, and fasten it with the screw provided.

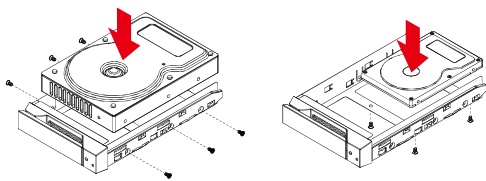


- 3. Insert the Disk Tray:** Slide the Disk Tray back into the SR4 unit.
- 4. Connect the Cables:** Use the included cables to connect the SR4 and PC/Mac.
- 5. Power On:** Turn on the system; the OS should auto-detect the disk.
- 6. Format the Disk:** Follow OS prompts to format the disk if necessary.

Please Note:

- Please connect SR4 to PC/Mac (power on status) before power on SR4, otherwise SR4 will be on the sleep mode.

RAID Mode Change

Change the RAID Mode: (The default RAID mode is JBOD)

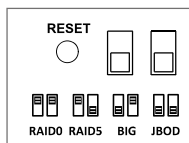

- 1. Connect the SR4 to PC/Mac:**
Follow the hardware installation to connect the SR4 to PC/Mac and turn on the PC/Mac.
- 2. Select the RAID Mode:**
Select the RAID Mode you want to use by change the RAID Mode switch.
- 3. Press the Reset Button:**
Use the Eject Pin to press the Reset button.
- 4. Power On the SR4:**
Turn on the SR4 and keep pressing the Reset button for 5 seconds. The disk LED will be flashing once the RAID mode is changed. Then you can release the Reset button.
- 5. Power Off and On Again:**
Turn off the SR4 and on again. Then you can use the SR4 in the RAID mode selected.

3

Please Note:

- Please change to JBOD mode first if you want to change the RAID Mode from RAID 5 / RAID 0 / Big to others. Then follow the steps to change it.
- Change RAID Mode to RAID 5 / RAID 0 / Big will erase the data on disks. Please backup the data to other devices before change it.

Precautions Before Use

- 1. One USB Cable** – Connect to one PC/Mac with one USB cable.
- 2. Backup Data** – Ensure you have a backup of all important files.
- 3. Ground Yourself** – Prevent static discharge by grounding yourself.
- 4. Unplug Power** – Turn off and unplug your computer before installation.
- 5. Use a Static-Free Surface** – Avoid working on carpets or conductive surfaces.
- 6. Read Instructions** – Review all steps before starting.
- 7. Safely Remove** – Always safely removed SR4 through the operating system before turning it off or remove the USB connection.

Thank you for choosing STARDOM products!

Please note that the information in this manual was accurate at the time of publication, but product specifications may have changed prior to shipping. For the latest specifications and updates, visit www.STARDOM.com.tw or contact your sales representative.

For any inquiries about STARDOM products, or to receive the latest product manuals or firmware updates, please email us at: supporting@raidontek.com.

STARDOM is a brand under RAIDON Technology, Inc.
All content in this manual is copyrighted by RAIDON Technology, Inc.

4