 



ST4-B32 系列快速安裝手冊

產品外觀圖與包裝內容物

前視圖

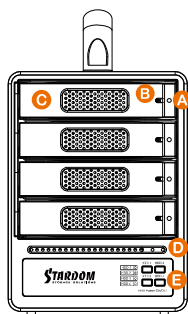

 背視圖

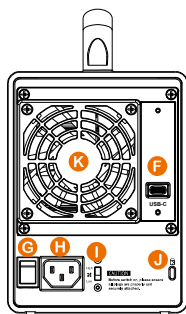


- | | | |
|-------------------|-------------------------|-------------|
| A 硬碟 LED | F USB-C (20Gbps) | K 風扇 |
| B 硬碟托盤開啟孔 | G 系統電源開關 | |
| C 硬碟托盤把手 | H 電源插座 | |
| D 系統電源 LED | I 風扇轉速開關 | |
| E 硬碟電源按鍵 | J 防盜孔 | |

包裝內容應包含以下：

- ST4-B32 x1
- USB Type-C to Type-C 線 x1 (ST4-BA32 / ST4-BA32-B / ST4-B32 / ST4-B32-B)
- USB Type-C to Type-A 線 x1 (ST4-BA32 / ST4-BA32-B / ST4-B32A / ST4-B32A-B)
- 電源線 x1
- 快速安裝手冊 x1
- 配件

請注意：

 - 請檢查產品和所有隨附附件是否有損傷或缺失零件。如果您遇到任何問題，請聯絡您的產品供應商。
- 如需更多資訊、資源和下載相關資料，請造訪 STARDOM 官方網站 www.STARDOM.com.tw。



1

v0.1 (Nov. 2025)

3. 插入硬碟托盤：將硬碟托盤放回 ST4 中。

4. 連接纜線：使用隨附的 USB 線連接 ST4 與 PC/Mac，確保所有連線都是安全的。

5. 開啟電源：硬體安裝完成後，請開啟 ST4 與 PC/Mac 電源，作業系統應會自動偵測硬碟。

6. 格式化硬碟：如果作業系統挑出提示，請依照其指示的步驟格式化硬碟。格式化後，硬碟即可使用。

使用前注意事項

1. 備份重要資料 – 確保所有重要資料已經備份
2. 靜電接地 – 將自己接地來防止靜電
3. 拔掉電源 – 安裝前關閉電腦並拔掉電源插頭
4. 使用無靜電表面 – 避免在地毯或導電表面上作業
5. 閱讀說明 – 開始安裝前查看所有步驟
6. 安全移除 – 在關閉 ST4 電源或是移除 USB 線之前，請務必透過作業系統安全移除 ST4

3


LED 狀態說明

狀態	LED 狀態	
	硬碟 LED	系統電源 LED
系統電源關閉	----	----
系統電源開啟	----	藍燈恆亮
沒有硬碟或硬碟故障	紅燈恆亮	藍燈恆亮
硬碟閒置	藍燈恆亮	藍燈恆亮
資料存取中	藍燈閃爍	藍燈恆亮


硬體安裝

請依照以下步驟安裝 ST4：

1. 解開硬碟托盤：使用包裝隨附的鑰匙解鎖硬碟托盤。解開後托盤把手會自行彈出，然後將硬碟托盤拉出。

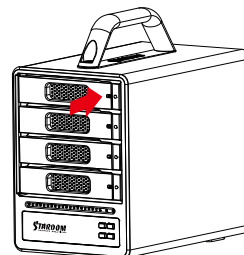

2. 安裝硬碟：將硬碟放到硬碟托盤，並使用包裝隨附的螺絲將其固定。

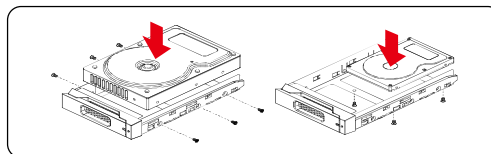

2

感謝您選擇 STARDOM 產品!

請注意，本手冊中的資訊在出版時是正確的，但產品規格在出貨前可能已變更。有關最新規格與更新，請造訪 www.STARDOM.com.tw 或聯絡您的經銷商。

如果您對 STARDOM 產品有任何疑問，或是要取得最新的產品手冊或軟體更新，請發送電子郵件到 supporting@raidontek.com



4

ST4-B32 Series Quick Installation Guide

Product Diagrams and Package Contents

Front View

  Rear View

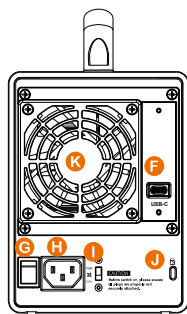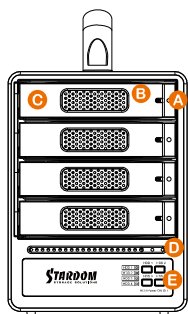


- | | | |
|---------------------------------|------------------------------|--------------|
| A Disk LED | F USB-C (20Gbps) | K Fan |
| B Disk Tray Release Hole | G System Power Switch | |
| C Disk Tray Latch | H Power Socket | |
| D System Power LED | I Fan Speed Switch | |
| E Disk Power Button | J Anti-theft Hole | |

Package Contents:

- ST4-B32 x1
- USB Type-C to Type-C Cable x1 (ST4-BA32 / ST4-BA32-B / ST4-B32 / ST4-B32-B)
- USB Type-C to Type-A Cable x1 (ST4-BA32 / ST4-BA32-B / ST4-B32A / ST4-B32A-B)
- Power Cord x1
- Quick Installation Guide x1
- Accessories

Please Note:

 - Check the product and all included accessories for defects or missing parts. If you encounter any issues, contact your product supplier.
- For additional information, resources, and downloads, please visit the STARDOM official website at www.STARDOM.com.tw.



1

v0.1 (Nov. 2025)

LED Status Guide


Status	LED Status	
	Disk LED	System Power LED
System Power Off	----	----
System Power On	----	Blue light always On
No Disk / Disk Failed	Red light always On	Blue light always On
Disk Idle	Blue light always On	Blue light always On
Data Accessing	Blue light flashing	Blue light always On

Hardware Installation

Installing the ST4: Step-by-Step Guide


1. Open the Disk Tray

 Insert the provided eject key into the release hole, the disk tray latch will be ejected. Then pull out the tray.

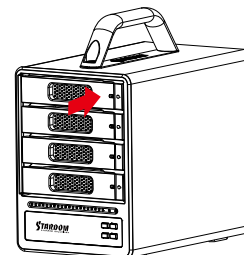

2. Install the Disk

Insert the disk into disk tray, and fasten it with the screw provided.

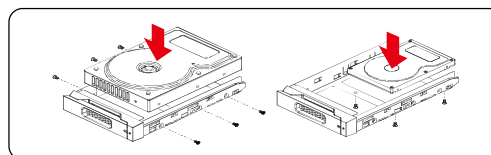

2

3. Insert the Disk Tray

Slide the Disk Tray back into the ST4 unit.

4. Connect the Cables

Use the included cable to connect the ST4 and PC/Mac. Ensure all connections are secure.

5. Power On

Turn on the ST4 and PC/Mac. The operating system should automatically detect the new disk.

6. Format the Disk

If prompted, follow the on-screen instructions to format the disk. Once formatted, the disk will be ready for use.

Precautions Before Use

- 1. Backup Data** – Ensure you have a backup of all important files.
- 2. Ground Yourself** – Prevent static discharge by grounding yourself.
- 3. Unplug Power** – Turn off and unplug your computer before installation.
- 4. Use a Static-Free Surface** – Avoid working on carpets or conductive surfaces.
- 5. Read Instructions** – Review all steps before starting.
- 6. Safely Remove** – Always safely removed ST4 through the operating system before turning it off or remove the USB connection.

3

Thank you for choosing STARDOM products!

Please note that the information in this manual was accurate at the time of publication, but product specifications may have changed prior to shipping. For the latest specifications and updates, visit www.STARDOM.com.tw or contact your sales representative.

For any inquiries about STARDOM products, or to receive the latest product manuals or firmware updates, please email us at: supporting@raidontek.com.

STARDOM is a brand under RAIDON Technology, Inc.
All content in this manual is copyrighted by RAIDON Technology, Inc.

4