 


ST4R-B32 系列快速安裝導引

產品外觀圖與包裝內容物

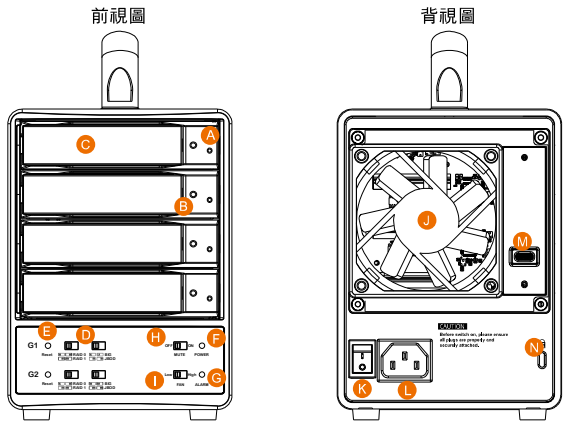

- | | | |
|------------|------------|------------------|
| A 硬碟LED指示燈 | F 電源LED指示燈 | K 電源開關 |
| B 硬碟托盤釋放孔 | G 警示LED指示燈 | L 電源輸入 |
| C 硬碟托盤把手 | H 靜音開關 | M USB-C埠(20Gbps) |
| D RAID模式開關 | I 風扇轉速控制開關 | N 防竊孔 |
| E 重設按鍵 | J 風扇 | |

包裝內容物

- ST4R-B32 x1
- USB3.2 Type-C to Type-C 線 x1
- 快速安裝導引 x1
- 螺絲與頂針

請注意：

- 請檢查產品和所有隨附附件是否有損傷或缺失零件。如果您遇到任何問題，請聯絡您的產品供應商。
- 如需更多資訊、資源和下載相關資料，請造訪STARDOM 官方網站 www.STARDOM.com.tw。



1

v0.1 (Sep. 2026)


LED燈號說明

狀態	電源 LED	硬碟 LED			故障 LED	蜂鳴器
		RAID 1	JBOD	RAID 0 / BIG		
閒置	藍燈恆亮	藍燈恆亮	藍燈恆亮	藍燈恆亮	---	---
無硬碟	藍燈恆亮	紅燈恆亮	紅燈恆亮	紅燈恆亮	---	---
硬碟故障	藍燈恆亮	紅燈閃爍	---	紅燈閃爍	---	---
RAID 降級	藍燈恆亮	紅燈閃爍	---	紅燈閃爍	---	---
資料存取	藍燈恆亮	藍燈閃爍	藍燈閃爍	藍燈閃爍	---	---
資料重建-來源碟	藍燈恆亮	藍燈呼吸燈	---	---	---	---
資料重建-目標碟	藍燈恆亮	紫燈呼吸燈	---	---	---	---
溫度過高	藍燈恆亮	---	---	---	紅燈閃爍	鳴叫


硬體安裝

請依照以下步驟安裝ST4R-B32：

 1. **打開硬碟托盤：**使用提供的頂針插入釋放孔，托盤把手將會彈出。拉出托盤。



 2. **安裝硬碟：**將硬碟插入磁碟托架，並用提供的螺絲固定。

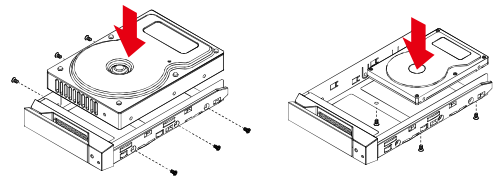

2

3. **插入磁碟托盤：**將磁碟托盤滑回 ST4R-B32。
4. **連接電纜：**使用隨附的USB線連接 ST4R 和 PC/Mac。
5. **開機：**開啟系統電源；作業系統應該自動偵測磁碟。
6. **格式化磁碟：**如有必要，請依照作業系統提示格式化磁碟。

請注意：

- 請在啟動之前將 ST4R 連接到 PC/Mac (開機狀態)，否則 ST4R 將處於睡眠模式。

RAID模式切換

變更RAID模式：(設值是JBOD)



1. **將 ST4R 連接到 PC/Mac：**依照硬體安裝將 ST4R 連接到 PC/Mac 並開啟電源。
2. **選擇 RAID 模式：**透過變更 RAID 模式開關選擇您想要使用的 RAID 模式。
3. **按下重置按鈕：**使用頂針按下重設按鍵直到磁碟LED燈停止閃爍。然後您可以釋放重置按鍵。
4. **關閉並重新開啟電源：**關閉 ST4R 並重新開啟。然後，您就可以在所選的 RAID 模式下使用 ST4R。

請注意：

- 將 RAID 模式變更為 RAID 0 / RAID 1 / Big 將會清除磁碟上的所有資料。請在更改前將資料備份到其他設備。

3

使用前注意事項

1. **備份資料**—確保所有重要文件都有備份。
2. **接地**—透過接地防止靜電釋放。
3. **拔掉電源**—安裝前關閉電腦並拔掉電源插頭。
4. **使用無靜電表面**—避免在地毯或導電表面上工作。
5. **閱讀說明**—開始之前檢查所有步驟。
6. **安全移除**—在關閉 ST4R 或移除 USB 連接之前，請務必透過作業系統安全移除 ST4R。

感謝您選擇 STARDOM 產品！

請注意，本手冊中的資訊在出版時是正確的，但產品規格在出貨前可能已變更。有關最新規格與更新，請造訪 www.STARDOM.com.tw 或聯絡您的經銷商。


如果您對 STARDOM 產品有任何疑問，或是要取得最新的產品手冊或軟體更新，請發送電子郵件到 supporting@raidontek.com

STARDOM 是 RAIDON Technology, Inc. (銳銳科技) 旗下品牌
本手冊中所有內容的版權均為 RAIDON Technology, Inc. (銳銳科技) 所有

4

ST4R-B32 Series Quick Installation Guide

 Product Diagrams and Package Contents

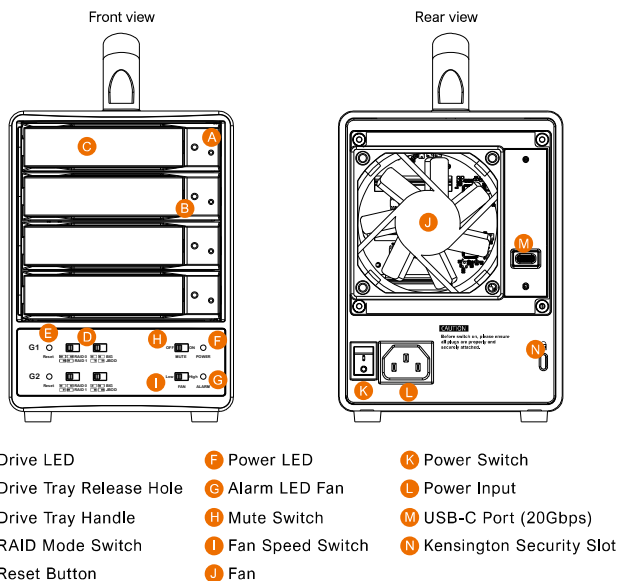

Package Contents:

- ST4R-B32 unit x1
- Quick Installation Guide x1
- USB3.2 Type-C to Type-C Cable x1
- Screws & Eject pins

Please Note:

- Check the product and all included accessories for defects or missing parts. If you encounter any issues, contact your product supplier.
- For additional information, resources, and downloads, please visit the STARDOM official website at www.STARDOM.com.tw.



1

v0.1 (Sep. 2026)


LED Status Guide

Status	Power LED	Drive LED			Failed LED	Buzzer
		RAID 1	JBOD	RAID 0/BIG		
Idle	Blue light always on	Blue light always on	Blue light always on	Blue light always on	---	---
No Drive	Blue light always on	Red light always on	Red light always on	Red light always on	---	---
Drive Failed	Blue light always on	Red light flashing	---	Red light flashing	---	---
RAID Degraded	Blue light always on	Red light flashing	---	Red light flashing	---	---
Data Accessing	Blue light always on	Blue light flashing	Blue light flashing	Blue light flashing	---	---
Rebuilding - Source	Blue light always on	Blue Breathing light	---	---	---	---
Rebuilding - Target	Blue light always on	Purple Breathing light	---	---	---	---
Over Temperature	Blue light always on	---	---	---	Red light flashing	On


Hardware Installation

Installing the ST4R-B32

 - 1. Open the Disk Tray:** Use the provided key to unlock the Disk Tray, press the disk tray latch and it will be ejected. Then pull out the tray.



 - 2. Install the Disk:** Insert the disk into disk tray, and fasten it with the screw provided.

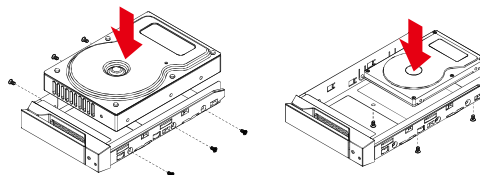

2

 
- 3. Insert the Disk Tray:** Slide the Disk Tray back into the ST4R unit.
- 4. Connect the Cables:** Use the included cables to connect the ST4R and PC/Mac.
- 5. Power On:** Turn on the system; the OS should auto-detect the disk.
- 6. Format the Disk:** Follow OS prompts to format the disk if necessary.

Please Note:

- Please connect ST4R to PC/Mac (power on status) before power on it, otherwise ST4R will be on the sleep mode.

RAID Mode Change

Change the RAID Mode: (The default RAID mode is JBOD)



1. Connect the ST4R to PC/Mac:

Follow the hardware installation to connect the ST4R to PC/Mac and turn on the PC/Mac.

2. Select the RAID Mode:

Select the RAID Mode you want to use by change the RAID Mode switch.

3. Press the Reset Button:

Use the Eject Pin to press the Reset button until the disk LEDs flashing, then you can release the Reset button.

4. Power Off and On Again:

Turn off the ST4R and on again. Then you can use the ST4R in the RAID mode selected.

Please Note:

- Change RAID Mode to RAID 5 / RAID 0 / Big will erase the data on disks. Please backup the data to other devices before change it.

3

Precautions Before Use

- 1. Backup Data** – Ensure you have a backup of all important files.
- 2. Ground Yourself** – Prevent static discharge by grounding yourself.
- 3. Unplug Power** – Turn off and unplug your computer before installation.
- 4. Use a Static-Free Surface** – Avoid working on carpets or conductive surfaces.
- 5. Read Instructions** – Review all steps before starting.
- 6. Safely Remove** – Always safely removed ST4R through the operating system before turning it off or remove the USB connection.

Thank you for choosing STARDOM products!

Please note that the information in this manual was accurate at the time of publication, but product specifications may have changed prior to shipping. For the latest specifications and updates, visit www.STARDOM.com.tw or contact your sales representative.

For any inquiries about STARDOM products, or to receive the latest product manuals or firmware updates, please email us at: supporting@raidontek.com.

STARDOM is a brand under RAIDON Technology, Inc.
All content in this manual is copyrighted by RAIDON Technology, Inc.

4