
STARDOM STORAGE SOLUTIONS

DR2-TB2 快速安裝導引

產品示意圖與配件表

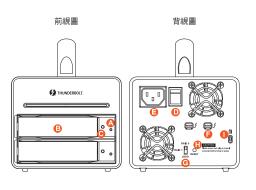

- A 硬碟譜取燈
- B 硬碟抽取盒把手
- 硬碟抽取盒鑰匙孔
- 📵 電源開關
- 電源插座
- Thunderbolt™ 連接埠
- ⑥ RAID 切換鈕
- 🕕 RESET 按鈕
- 防竊鎖孔

打開包裝外盒後,包裝內容應包含下列組件:




- 請確認相關配件與產品本身是否有受損或配件缺少,若有任何疑問請與本產品供應 商聯絡。
- 請前往官網 (www.stardom.com.tw) 下載說明書、驅動程式以及其餘相關資源。

V1.2 (Dec. 2018)

1

- 3. 硬碟安裝完成後,請將抽取盒平移放入主機內,並關上把手。
- 4. 透過機體背面的RAID模式開關,切換至JBOD模式。
- 5. 將相關連接線接上,最後接上電源轉接器。
- 6. 將機體背面的電源開關打開。

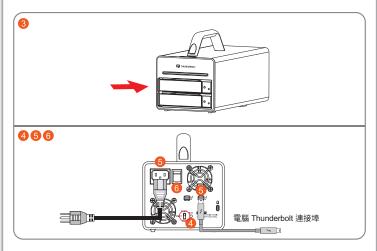

- a. 如機器啟動後,抽取盒燈號會由「紅燈恆亮 > 熄滅 >藍燈恆亮」燈號,即為完成機器安裝設定。
- b. 如機器啟動後,抽取盒燈號如出現「紅燈恆亮 > 熄滅 > 藍紫閃爍」燈號,請使用頂針插入「重置鍵」 3秒後鬆開頂針,待燈號由「藍紫閃爍」燈號轉變為「藍燈恆亮」燈號時,即為完成機器安裝設定。
- 8. 機器安裝設定完成後,即可依需求設定RAID模式,請參考「產品使用注意事項/3.切換RAID設定的標準程序」,做RAID模式切換設定。


燈號說明

狀態	硬碟狀態燈
電源開啟 / 無硬碟	紅燈恆亮
電源開啟 / 硬碟閒置	藍燈恆亮
資料重建 - 來源碟	呼吸燈(藍色)
資料重建 - 目標碟	紫燈恆亮

硬體安裝

請參照下列步驟,完成 DR2-TB2 的硬體安裝:

- 1. 請使用零件包內附的鑰匙插入鑰匙孔後,抽取盒門閂將會輕彈開啟,即可將硬碟機抽取盒取出。
- 2. 將硬碟安裝到抽取盒上,並以零件包內附的螺絲加以固定,以避免不必要的移動對硬碟造成傷害。

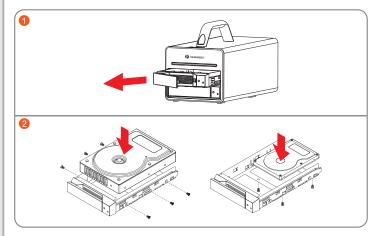

產品使用注意事項

- 1. 第一次使用本產品進行設定時,資料會被全數清除。請於硬碟置入前,確認硬碟已備份,避免資料遺失。
- 2. DR2-TB2 開機下在電腦進入系統待命或是休眠裝態時,會一起進入待命狀態。當電腦恢復正常運作,則 DR2-TB2 也會一併回復到正常使用狀態。
- 3. 切換 RAID 設定的標準程序:
 - 步驟1:請在 DR2-TB2 連線到電腦後,一併打開電腦和 DR2-TB2 的電源開關。
 - 步驟2:請在藍燈恆亮時,將在 DR2-TB2 背板上設定 RAID 設定的「切換開關」調到你所要的設定位置。
 - 步驟3:請使用頂針插入「重置鍵」,待前面板抽取盒上的閃爍藍紫燈結束、並轉成恆亮藍燈後鬆 開頂針。
 - 步驟4:請您再做一次關、開 DR2-TB2 電源的動作後,您已經改變、並重新設定了DR2-TB2 的 RAID。
- 4. 在新增或變更 RAID 模式後需重新啟動產品,以確保完成更新為新的 RAID 模式。
- 5. RAID 模式一旦設定完成,若要進行切換,因切換過程中將會清除硬碟中的資料,請務必先將硬碟中的資料另行備份後再行切換。
- 6. 強烈建議除了使用 DR2-TB2 的資料儲存功能外,請針對重要資料備份到另一個儲存裝置上或遠端備份,雙重備份您重要的資料。若您儲存在 DR2-TB2 的資料損毀或遺失,STARDOM 將不負任何的責任。


感謝您使用 銳銨科技股份有限公司 的產品。

本手冊裡的資訊在出版前雖然已經被詳細確認,但實際產品規格將已出貨時為準;任何的產品規格或 相關資訊更新,請您直接上 www.STARDOM.com.tw 網站查詢,或直接與您的業務聯絡窗口聯繫, 本公司將不另行通知。

如果您對 銳銨科技 的產品有任何疑問,或是想獲得最新產品訊息、使用手冊或韌體,請您聯絡 services@stardom.com.tw,我們將儘速回覆您。

本說明相關產品內容歸 銳銨科技股份有限公司 版權所有

Product Diagram & the Contents of Product package

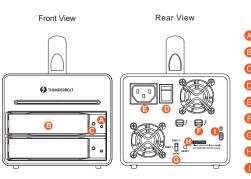

A HDD Access Indicator

Removable drive tray

HDD tray key lock

Power Switch

Power Socket


Thunderbolt™ Connector

RAID Dip-switch

Hidden Reset Button

Anti-theft cord slot


After you open the outside box, please make sure the following items/parts are contented in the box:

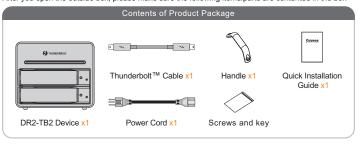

- Please check the product and accessories for any defect or missing parts. If you have any questions, please contact your product supplier
- Please visit the official website (www.stardom.com.tw) to download user manuals, drivers and other related resources.

V1.2 (Dec. 2018)

- 3. After installing two HDDs into Trays, please insert them into DR2-TB2, and then latch the handle.
- 4. Please switch RAID Dip-switch to JBOD mode at back-plate.
- 5. Please connect the Thunderbolt Cable, and then connect AC/DC Adapter to the product.
- 6. Please turn on power.

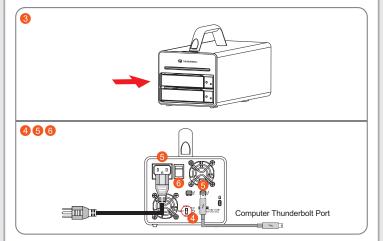

- a. After turning on power, the HDD/SSD Indicator will be changed with the following sequence, Red > Off > Blue, and then, DR2-TB2 is ready for use.
- b. In case if the HDD/SSD Indicator shows Red \geq Off \geq Blue Flashing, please use a pin to press the RESET Button for 3 seconds, and wait until the HDD/SSD Indicator is changed to Blue from Blue Flashing, your DR2-TB2 is then ready for use.
- 8. While your DR2-TB2 is ready for use, please follow the instruction of "3. The Standard Procedure to Switch RAID Setting" in the Important Notice and set the RAID mode to what you want. You could then start using your DR2-TB2 now.


the Indication of HDD Status

Status	LED Light Status
Power ON / No HDD	Solid Red Light
Power ON / Two HDDs	Solid Blue Light
Rebuilding-Source	Breathing Blue Light
Rebuilding-Target	Solid Purple Light

Hardware Installation

Please follow the following procedure to have your DR2-TB2 installed:

- 1. Use the provided key in the Accessories Kit and inserted it into the Key Access Opening to eject the Removable Drive Tray Latch and extract the Removable Drive Tray.
- Mount your hard drives onto the removable drive tray and secure it with the screws included in the accessory kit to avoid any damage to the hard drive due to accidental movements.

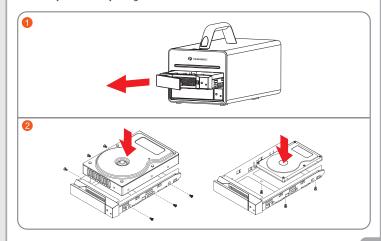

Important Notice

- 1. Since DR2-TB2 will delete all data files in your two HDDs/SSDs at its first-time use, please be informed that you shall first save all your personal data files into a safe memory space before starting setting your new DR2-TB2 to avoid any data loss during your start-up process.
- 2. DR2-TB2 will be forced to get into SLEEP mode while your Mac Computer is in either IDLE or SLEEP
- 3. The Standard Procedure to Switch RAID Setting:
 - Step 1: Please first connect DR2-TB2 to your Mac.
 - Step 2: Please set RAID Dip Switch to the position you choose.
 - Step 3: Please use the Key to press the hidden RESET key at the back-plate, hold and wait for the end of Blue-Purple LED blinking till a stable Blue light.
 - Step 4: Please turn off your DR2-TB2, and re-turn it on again. You now have reset DR2-TB2 with a new RAID mode successfully.
- 4. The product needs to be restarted after adding or changing the RAID mode, and the update is guaranteed to be the new RAID mode
- 5. A WARNING to you if you plan to delete or switch your original RAID setting: If you plan to delete or switch your original RAID setting, please always duplicate your personal data before deleting or changing it.
- 6. We strongly recommend you to keep an extra copy at your important personal data other than stored in your DR2-TB2 product. Stardom will not be responsible of your data loss problem.

Thank you for choosing product from **RAIDON Technology Inc.** This information in the manual has been thoroughly checked before publication, but may not conform to the product catually delivered which mean actual product specifications depend on the product shipped to you. Any update in the specifications or product-related information shall not be subject to further notice but for the latest information on the product, please visit the website as www.STARDOM.com.tw or contact us at services@stardom.com.tw , and we will get back to you as soon as possible.

Copyright @ RAIDON TECHNOLOGY, INC. All rights reserve